



1 PRODUCT INTRODUCTION

FACTORY NUMBERING

Product silk screen image

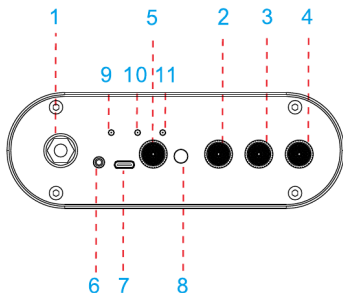

CONTROL-PANEL LEGENDS

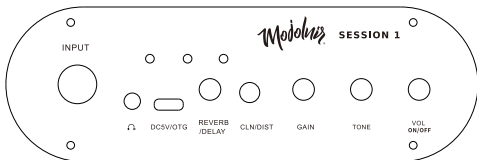

2 CONTROLS 01-06

Numbering follows the supplied control artwork.

1 INSTRUMENT INPUT

6.35 mm / 1/4 in input for electric or acoustic-electric guitar. Use a standard instrument cable.

2 GAIN

Controls instrument input gain. Turn clockwise to increase gain; turn counterclockwise to reduce it.

3 TONE

Turn clockwise for a brighter sound. Turn counterclockwise for a softer, warmer sound.

4 VOLUME / POWER

Turn clockwise from OFF to switch on and increase volume. Turn fully counterclockwise until it clicks to switch off.

5 REVERB / DELAY

Controls the ambience effect marked REVERB / DELAY. Turn clockwise for more effect and counterclockwise for less.

6 HEADPHONE OUTPUT

3.5 mm stereo headphone output. Inserting headphones automatically mutes the internal speaker. Headphones are not included.

3 CONTROLS 07-11

Numbering follows the supplied control artwork.

7 USB-C / DC 5V / OTG

Use a certified DC 5V / 2A source for charging. With a compatible OTG data cable, connect to a supported phone or computer for recording or live use.

8 CLEAN / DISTORTION SWITCH

Button released: CLEAN mode, for a clear and natural tone.

Button pressed: DISTORTION mode, for a fuller distorted tone.

9 CHARGING INDICATOR

Red on: charging. Red off: charging is complete.

Disconnect the charging cable after charging is complete.

10 DISTORTION INDICATOR

Red on: DISTORTION mode. Red off: CLEAN mode.

The indicator follows the position of control 08.

11 BLUETOOTH INDICATOR

Off: Bluetooth disabled. Flashing blue: waiting for a connection. Steady blue: Bluetooth is connected.

4 PRECAUTIONS + DATA

IMPORTANT PRECAUTIONS

- Keep away from high temperature and direct sunlight.
- Do not use or store in damp or high-humidity locations.
- Do not disassemble, modify or repair the amplifier.
- Stop use after a drop, impact, odor or abnormal heat.
- Charge only from a certified DC 5V / 2A power source.
- Charge fully before first use. During long-term storage, recharge at least once every 3 months.

TECHNICAL DATA

RATED OUTPUT	10W
SPEAKER	4 in x 1
BATTERY CAPACITY	1800mAh
CHARGING INPUT	DC 5V / 2A
CHARGING TIME	Approx. 3-4 hours
CONTINUOUS USE	Up to 5 hours*
WIRELESS VERSION	5.3*

FCC NOTICE

This device complies with Part 15 of the FCC Rules.
Operation is subject to the following two conditions:
(1) this device may not cause harmful interference; and
(2) this device must accept any interference received,
including interference that may cause undesired operation.

